

Vent for vapor recovery line

Mod. 190



APPLICATION

The vent is normally used to allow air entry inside the tank and to help the regulatation of the tank atmosphere.

The structure of the vent and a screen inside it protect the pipework from dirty, insects or other particles avoiding vent line obstruction.



(€ ⟨€x⟩ II 2 G


ATTENTION:

It is not a safety device. In the presence of flammable liquid it is recommended to install an End of Line Deflagration Flame Arrester, that can be a pressure vacuum vent Model 197 ENP or just a vent Model 197 ENP VENT.

CHEMICAL SUITABILITY

- Standard model is for traditional fuel without additives. **ON REQUEST:**
- "PTFE" coated model is for special fuel, non-aggresive solvents or chemical products.
- "SS" model (Stainless Steel) is for aggressive solvents, acids or bases.

PART	BRASS	PTFE	INOX (SS)
BODY	BRASS	BRASS + PTFE COATING	STAINLESS STEEL
SCREEN	BRASS	BRASS + PTFE COATING	STAINLESS STEEL

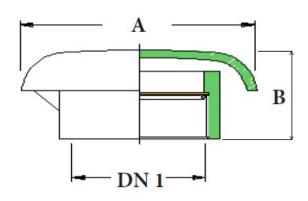

THREAD= BSPP ISP 228-1 FEMALE

DIMENSIONS

CODE	CODE BODY		A	В
086970 SS	086970 SS STAINLESS STEEL		80	33
087070 SS STAINLESS STEEL		2"	90	40
087071 SS	O87071 SS STAINLESS STEEL		135	40
086950	BRASS	3/4"	50	30
086960	086960 BRASS		55	30
086970	086970 BRASS		80	36
087070	087070 BRASS		95	45
087071 BRASS		3"	135	40

INSTALLATION

- The Vent is only for vertical installation at the end of vapor pipeline.
- For correct installation follow the Directives and product User Manual.
- For custom application or maintenance write to: **quality@ridart.it**.
- Declaration of Conformity and User Manual are available on: www.ridart.it/support

Mod. 190 SS

MAINTENANCE

- Periodically check the device is necessary to remove possible dirty.
- Always replace the product after fire, deflagration, brake or damage.
- In case of tampering warranty expires and safety protection is not quaranteed.