

# 442

## OVERFILL PREVENTION VALVE



II 1G Ex h IIB T6 Ga

The Overfill Prevention Valve Ridart is used to prevent any possible overfill during charging hazardous or dangerous fluids.

- Application: petrochemical, pharmaceutical & more.
- Valve opens and closes automatically.
- No residual liquid in pipe at the end of loading process.
- The operator cannot leave the pump during the refueling process.

It's a Safety Device in according with Directives ATEX 2014/34/EU, EN ISO 13616-1:2016, EN ISO 80079-36:2016, Technical Norm Fire Prevention 41/256 31/10/2019, d.P.R. 10/520 19/03/1955 and subsequent amendments.

### Attention

\* Flow and Turbulence should modify initial and final closure level by  $\pm 20\%$ .

The best performances allowed by the new regulation:

- Max operational pressure 8 bar for pressure filling.
- Loading process needs operator supervisor.



Mod. 442  
Aluminium



Mod. 442  
PTFE coated




Mod. 442  
Stainless Steel

### Chemical Suitability


- Aluminium standard model is for traditional fuel without additives.
- "PTFE" coated model is for special fuel, non-aggressive solvents or chemical products.
- "SS" model (Stainless Steel) is for aggressive solvents, acids or bases.

## Specification

<b>PRODUCT</b>	<b>442</b>	<b>442</b>	<b>442</b>
<b>CODE</b>	<b>442-80 AL</b>	<b>442-80 AL PTFE</b>	<b>442-80 SS</b>
<b>INSTALLATION</b>	VERTICAL	VERTICAL	VERTICAL
<b>THREAD UP</b>	3" F BSPP	3" F BSPP	3" F BSPP
<b>THREAD DOWN</b>	3" F BSPP	3" F BSPP	(2" F BSPP on demand)
<b>HEIGHT BODY</b>	502 mm	502 mm	492 mm
<b>TYPE OF FILLING</b>	GRAVITY or PUMP	GRAVITY or PUMP	GRAVITY or PUMP
<b>INITIAL CLOSURE LEVEL*</b>	270 mm	270 mm	330 mm
<b>FINAL CLOSURE LEVEL*</b>	120 mm	120 mm	150 mm
<b>MIN FLOW l/min (230 mbar)</b>	60 norm requested	60 norm requested	60 norm requested
<b>MAX FLOW l/min (8 bar)</b>	900 norm requested	900 norm requested	900 norm requested
<b>BODY</b>	ALUMINIUM	AL + PTFE COATING	STAINLESS STEEL
<b>SCREW</b>	STAINLESS STEEL	STAINLESS STEEL	STAINLESS STEEL
<b>POPPET</b>	STAINLESS STEEL	STAINLESS STEEL	STAINLESS STEEL
<b>SEALS</b>	PTFE + CARBON	PTFE + CARBON	PTFE + CARBON
<b>FLOAT</b>	PP HD + CARBON	PP HD + CARBON	PP HD + CARBON
<b>SUPPORT</b>	STAINLESS STEEL	STAINLESS STEEL	STAINLESS STEEL
<b>SPRING</b>	STAINLESS STEEL	STAINLESS STEEL	STAINLESS STEEL

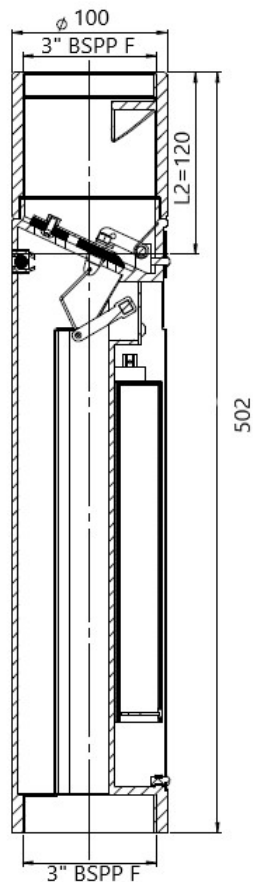

Mod. 442 and 442 PTFE  
Aluminium

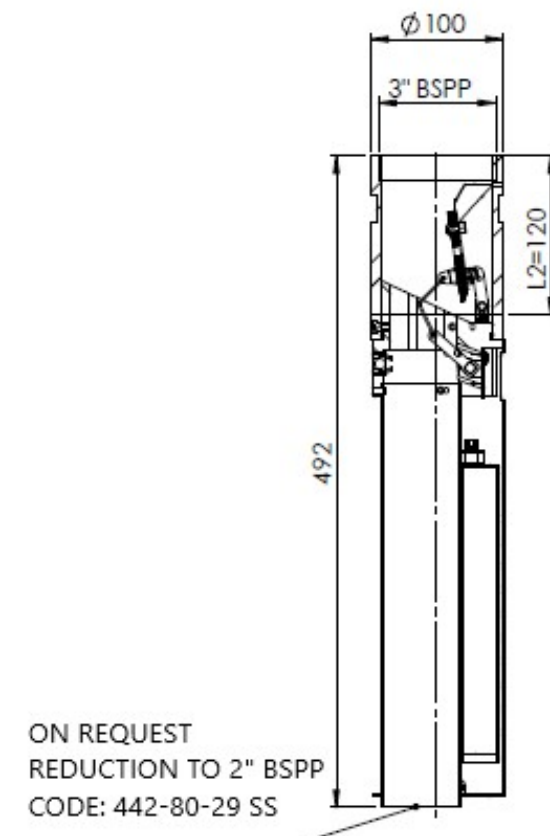

Mod. 442  
Stainless Steel

## Identification plate

- Fix identification plate next to unloading plant

## Features

- Easy installation with drop and riser pipe (delivered on request)
- Gravity or pumped filling
- Remote or direct filling
- Two levels of closure
- No risk of fire or fuel leaking
- No need to dismantle the manhole

## Installation

- Protection System is unidirectional and only for vertical installation.
- For correct installation follow the Directives and product User Manual.
- For custom application or maintenance write to: [quality@ridart.it](mailto:quality@ridart.it).
- Declaration of Conformity and User Manuals are available on: [www.ridart.it/support](http://www.ridart.it/support).

Before proceeding with installation be sure that valve model is in compliance with local/national laws which regulate this specific device in relation to tank capacity requirements, normally 90%.

The valve can be installed under the manhole lid of the tank in an existent 4" riser pipe, there is no need to remove the manlid. The valve can be pre-assembled in factory with aluminum drop tube, normally 150cm long, and/or riser pipe of the length according to the customer request. For detailed installation procedure consult our user manual.

In order to prevent product spillage from the storage tank, forecourt workers must be trained and managed to inspect the loading adaptors and hoses for damaged or missing components. When loading equipment is not properly maintained or connections between adaptors and elbows or drain hose are not correctly performed fuel spills may result causing environmental contamination and explosion risk.

## Maintenance

- Periodically check the device is necessary to remove possible dirty.
- The overfill prevention valve must be properly stored, handled and kept in good condition to prevent the entry of particles or the deposit of dust in the moving parts
- Any maintenance activities must be carried out solely by specialized staff and according to the procedures defined by the general instruction manual and only with tools in conformity with the provisions of Appendix A of the EN 1127-1 or by ensuring the absence of an explosive atmosphere
- In case of tampering warranty expires and safety protection is not guaranteed.



Scan the QR code  
and select the appropriate  
Overfill Prevention Valve